



Minimum recommended personal protection equipment



Place the O-ring into the recess of the tapping tee base and place the fitting onto the main



Equally tighten the nuts on both sides of the tapping tee



Ensure the distances between the 'lugs' are identical and parallel on both sides



Slide the nut and grip ring over the service pipe and using a rubber mallet, gently tap the insert into the pipe



Slide the grip ring so it is flush with the pipe end and push the pipe fully into the tapping tee outlet




Using C ring wrenches fully tighten the nuts onto the body of the fitting

9



Using a 3/8" T key, remove the tapping tee dust cap and seal

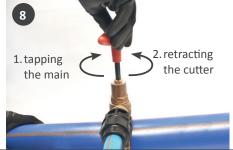


1. Tapping the main

Use a hexagonal 3/8" T key and turn in a clockwise direction. The cutter must come to a definite stop.

2. Retracting the cutter

Turn the T key in an anti-clockwise direction. The cutter will come to a definite stop at the top of the system

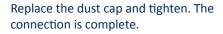

Carry out a water industry approved joint pressure test to check for leak-tightness.

Radius Systems Ltd

Radius House, Berristow Lane, South Normanton Alfreton, Derbyshire, DE55 2JJ, United Kingdom t: +44(0)1773 811112 e: sales@radius-systems.com w:www.radius-systems.com

